




## Quick Reference

This Quick Reference manual provides access to the DRO's main functions displayed on its 7" color screen. Once these functions are accessed, the DRO will guide the operator through its operations easily and intuitively with interactive assistance messages.


For an in-depth review of all the features, you can find the complete manual on our website: [www.fagorautomation.com](http://www.fagorautomation.com). You can also access it directly by scanning the QR code shown in [SETUP] [USER] [MANUAL].

## Turning the DRO on and off

The Display is switched on and off by pressing the on/off switch at the back.

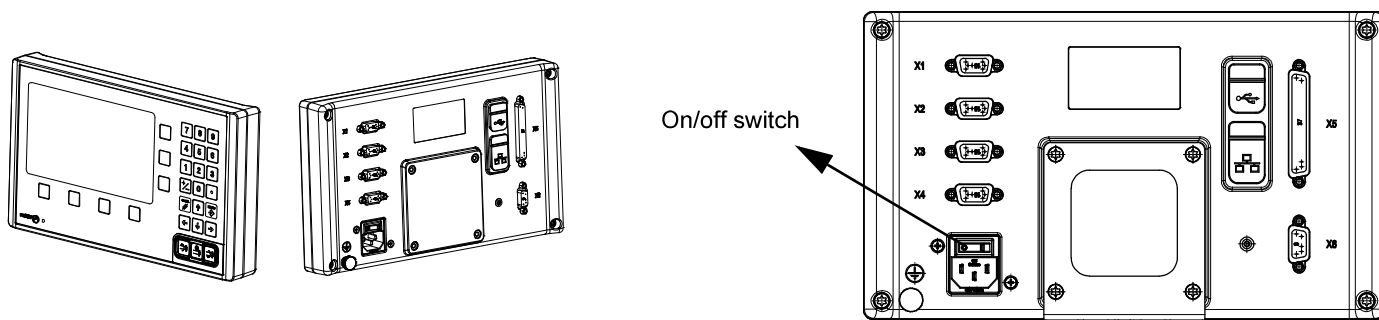

## Front plate

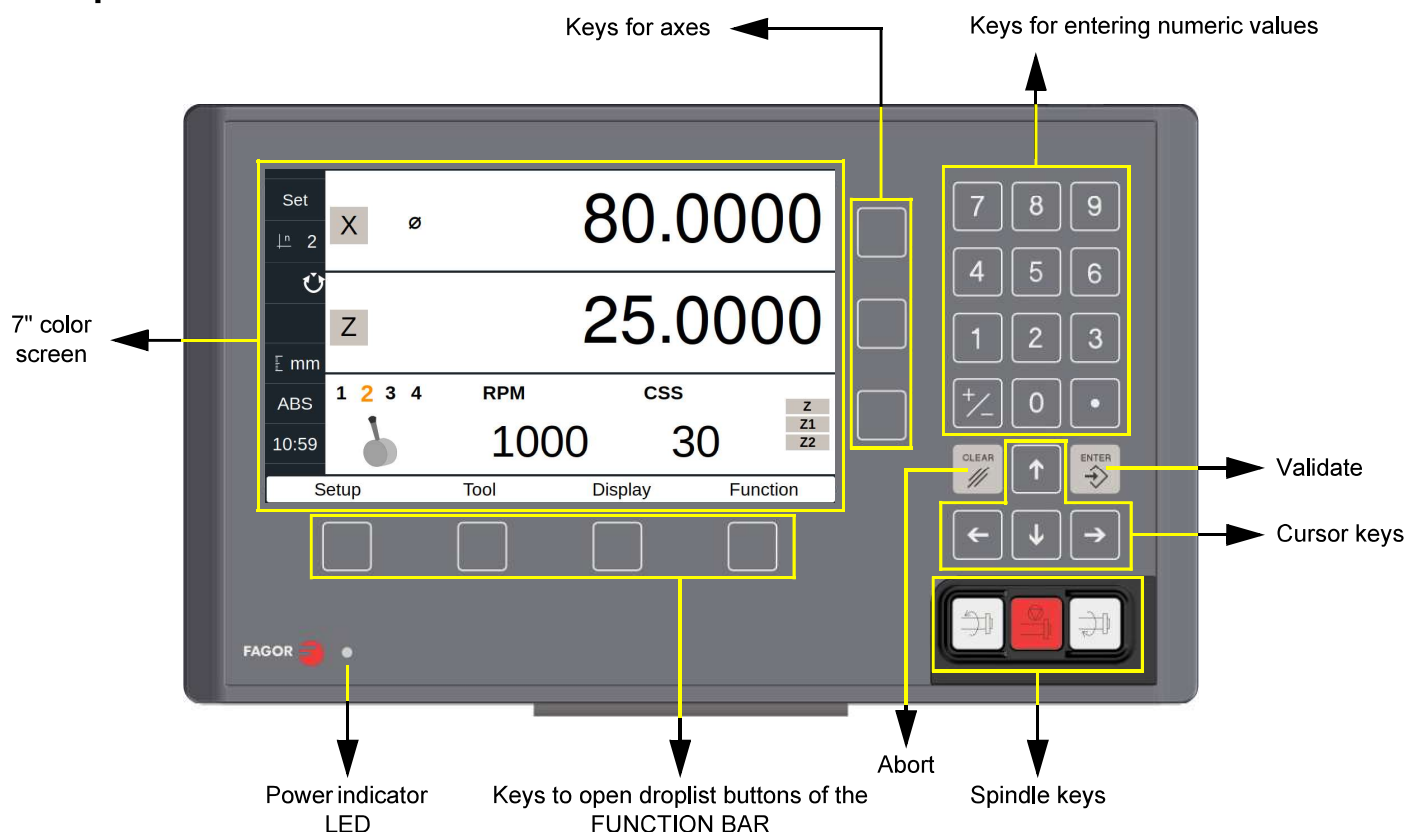

## Set axes to zero and Preselect

Display

Set / Clear

Pressing Set/Clear toggles between axis zeroing (Clear) and presetting (Set). The status bar shows the current status of this function at the top left with the words Set o Clear.

## Spindle orientation




Stops the spindle. When pressed while the spindle is stopped, it gives access to spindle orientation.


## Main screen:

Here are the functions the machine operator can access from a main menu or main screen.


Once the functions are accessed, the DRO guides the operator through screen messages and a direct access to help texts for each operation using the function key ?.

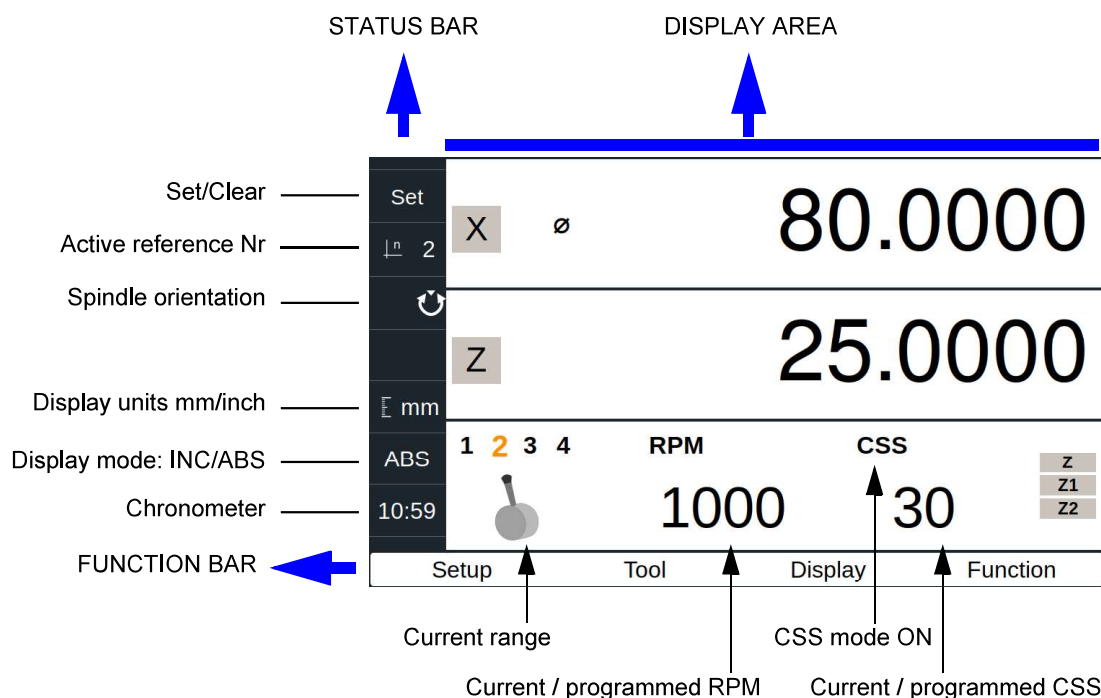

## Access to functions:

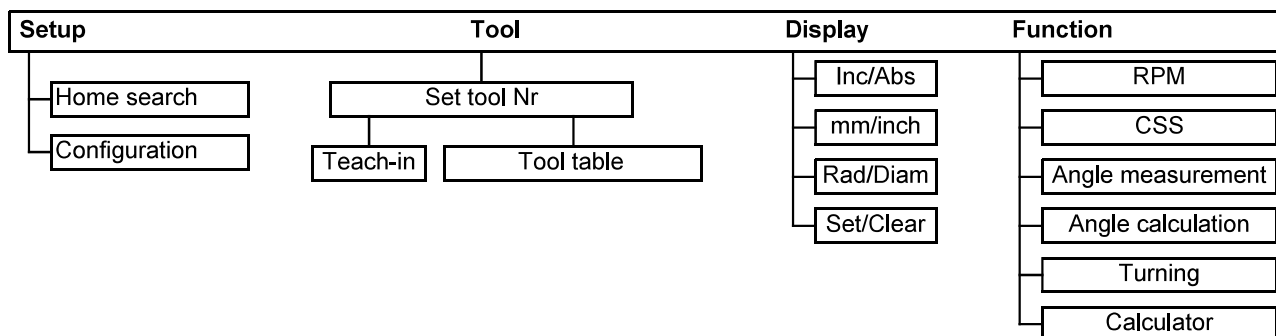

## Accessing installation parameters:

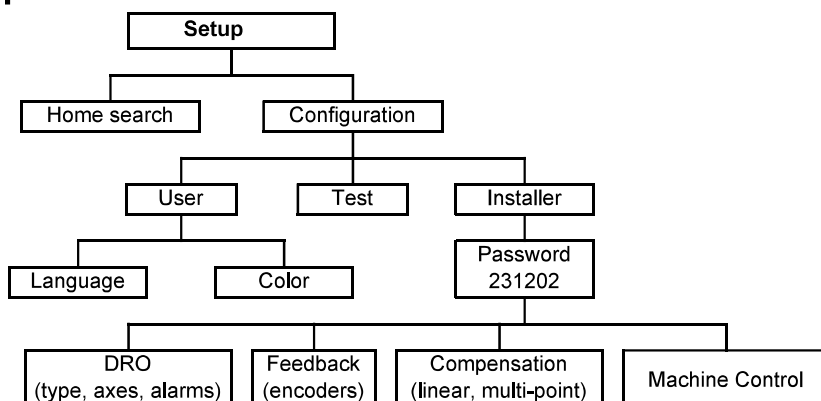

FAGOR AUTOMATION S. COOP.

Bº San Andrés Nº 19

Apdo de correos 144

20500 Arrasate/Mondragón

- Spain -

Web: [www.fagorautomation.com](http://www.fagorautomation.com)

Email: [contact@fagorautomation.es](mailto:contact@fagorautomation.es)

Tel.: (34) 943 039800

Fax: (34) 943 791712

